



Active™ Mini

Portable Bluetooth® Speaker

User Manuel



www.hellottec.com





Table of Contents

Thank You.....	4
Overview and Features.....	5
Overview and Functions.....	6
Specifications.....	12
Troubleshooting.....	14
Maintenance.....	15





Thank You

Thank you for purchasing our Active Mini Portable Bluetooth® Speaker.



What's in the box;

- 1 x Portable Bluetooth® Speaker
- 1 x USB Charging Cable
- 1 x Carry Cord
- 1 x User Manual





Overview and Features

 
Product Specifications

- Supports playback over Bluetooth.
- Supports playback over Micro SD card.
- Features card reader mode.
- Supports one-button to reconnect to Bluetooth.
- Supports playback of audio files in MP3, WMA and WAV formats.



Overview and Functions

Previous Track /Volume Down "-": Hold down to go to previous track. Press to decrease volume.

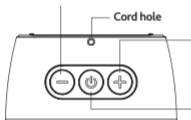

Next Track/Volume Up "+": Hold down to go to next track. Press to increase volume.

 
Power button: Hold down for 2 seconds to switch the device on/off. To switch between different modes, quickly press twice. Press once to play or pause.

Overview and Functions

USB port: Connect the USB cable for charging or data transfer.


Reset hole: When the speaker becomes locked, restart it by inserting the metal pin into the hole.

Micro SD card slot: Insert your micro SD card to play the files in it. Connect to a computer to copy or delete the files on the micro SD card.

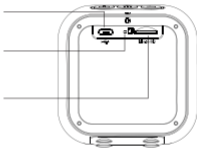

Overview and Functions

 - 1** Hold down for 2 seconds to switch the speaker on/off.




- 1 Hold down for 2 seconds to switch the speaker on/off.**
Hold down for 2 seconds to switch the speaker on. The speaker will make a 'ding-dong' sound and the blue LED light will start to flash. If there is a previously paired device, the blue light will remain illuminated. Hold down for 2 seconds to switch the speaker off. The blue light will go off.
- 2 Speaker Pairing**
Turn on the speaker, enable the Bluetooth function of your cell phone, tablet or other device, find the Bluetooth device named "ttcc Active™ Mini" and press Connect to confirm.
- 3** After successful pairing, device will make a 'ding dong' sound and blue LED will remain illuminated. When finished, you can select and play any music file from your cell phone or tablet.

Overview and Functions

1. You should type "0000", press OK and connect if necessary.
2. When switched on, the Bluetooth speaker will automatically connect to the last paired

Playback Music Files From Memory Card

 
- 1 **Insert a memory card and switch the device on.**
Insert a memory card that contains music files, press Power button to switch the device on and hold the button down until you hear a 'ding-dong' sound.





- 2 **Switch to Memory Card mode**
Quickly press the Power button  twice. After the speaker makes a 'dong-dong' sound, music files on the memory card will start playing.

 


Overview and Features

Tip: Bluetooth mode is the default mode for the Bluetooth speaker. If you want to play music from the memory card, you will first need to switch to Memory card mode. If you insert the card while the speaker is on the memory card files will be played automatically. (If there is an already paired device, it will be disconnected. You can toggle between the device and the memory card by quickly pressing the power button  twice.

Hands-Free Calls

- 1 If you receive a call while the speaker is connected to your smartphone, the music will be paused and you will be able to hear the call. Press the  button to answer the call, press again to end the call or hold the  button down (approximately 1 second) to reject the call.



Overview and Features



Switching to Memory Card read/charge

1

Adding and Deleting Music

Switch your speaker off, insert the memory card, connect the data cable to the speaker's Micro USB port and connect to your computer. Hold the Power button down until you hear a 'ding-dong' sound. Then the contents of the memory card will be displayed. This will allow you to add or delete music files to/from your memory card.



Specifications

Layout	
External interfaces	Micro USB interface
	Memory card slot
Product dimensions	W 78 x D 78 x H 40 (mm)
Net weight	162g (including built-in lithium-ion battery)

Basic parameters	
Product type	Portable Bluetooth speaker
Speaker system	3Wx1
Volume adjustment	Press the button to adjust
Specifications	Bluetooth 4.2+EDR
Storage type	Memory card (MAX. 32GB)
Battery	Built-in 600mAh lithium-ion battery

Technical parameters	
Output power	3 W THD = 10%
Frequency response	80Hz-18KHz
USB specifications	Compatible with USB 2.0 and USB 1.1
Charging time	Approximately 2-2.5 hours with DC5V - 1A
Playback duration	4 hours at medium volume, 2 hours at max. volume

Functions	
File format	Mp3,WMA,WAV
Voice call	Two-way call
Playback music files from memory card	Yes
Playback via Bluetooth	Yes
Memory card reader	Supports data access
Bluetooth connection	One-button to reconnect
Power level indicator	Supports power indication on iPhone or other iOS devices



Troubleshooting

Tip: If you have not used the speaker for a long time, please charge it before using the device. You can connect the speaker to a PC with the USB cable provided and charge the speaker whether the power is on or off. Alternatively, we recommend you charge the speaker via a power outlet with a DC5V=1A USB charger.

Layout	
Pairing	1. Switch the speaker off and restart.
	2. If your device prompts you for a password, type 0000.
Music playback is interrupted	1. Please make sure that the device is not out of effective range or there is no obstruction between the speaker and the device.
Memory card error	1. Please make sure that the memory card has the correct format (the speaker supports FAT32 format).
Format error	2. Please make sure that the memory card contains WAV, WMA and MP3 file formats.
No audio during playback	1. Please make sure that the speaker volume has been adjusted correctly.
	2. Please make sure that the speaker has not been paused.
Speaker fails to switch on	1. Restart the speaker by using the reset function.
Device does not respond	1. Restart the speaker by using the reset function.



Maintenance

Your device is the result of sophisticated design and masterful craftsmanship thus, its maintenance must be carried out with special care. The following recommendations will help you preserve your warranty coverage.

- Please store all accessories and attachments out of children's reach.
- Please keep the device dry. Rain, moisture, and all kinds of liquids contain minerals that may be corrosive to electronic circuits. If your device gets wet, please dry it thoroughly.
- Please do not use or store the device in dusty and/or dirty environments. Moving parts and electronic parts may be damaged.
- Please do not store the device in hot environments. High temperatures may shorten the life of electronic devices, damage batteries, and cause certain plastic parts to deform or melt.
- Please do not store the device in cold environments. When the device returns to normal temperature, moisture may build up inside it and the electronic circuits may be damaged.
- Please avoid dropping, impacts and shaking. Rough handling may cause breakage of internal circuits and sensitive mechanical parts.
- Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the device.
- Do not paint the device. Paint may restrict the moving parts and prevent them from functioning properly.

All the recommendations above apply to the device, battery, charger and all other accessories. If any device does not function properly, please take it to the nearest authorized service center.



Guidelines for Use

- Before starting to use the product please read the "INTRODUCTION and USER MANUAL" carefully.
- Please keep your product away from heat sources.
- Please pay attention to keep your product away from spillage and liquid exposure.
- Please do not expose your product to water and/or moisture. Failure to do so may result in electric shock.
- Please use your product as instructed in the user manual.
- Please do not expose your product to dust.
- Please unplug your product and its accessories when they are not in use.



Protect your Hearing

In order to eliminate the risk of damaging your hearing, please avoid listening at high volumes for prolonged periods. Please avoid having the device close to your ears when the speaker is in use. Prolonged exposure to high volume may damage your hearing.

Transportation Considerations

Please do not expose the product to any impacts during transport.





Health, Safety and Environmental Considerations

Please keep your product away from heat sources such as radiators and ovens. Please dispose of your electronic product in recycle bins instead of domestic waste bins due to the negative effects of harmful components on human health and the environment.

Information on Maintenance, Repair and Product Cleaning that can be Carried out by User

There are no user-serviceable parts inside. In case of faults please contact an authorized service station (Please see the list of authorized service stations) or the authorized seller from which you bought the product.

Periodic Maintenance

After the warranty period, technical maintenance should only be performed by authorized service stations.

Connection and Installation

Connection and installation should be performed by the user as instructed in the user manual. In case of any problems during connection and installation please contact authorized service stations (please see the list of authorized service stations).

Lifetime

The "LIFETIME" of the device is 3 years in terms of spare parts supply and proper functioning.





INFORMATION ABOUT MAINTENANCE, REPAIR, AND PRODUCT CLEANING

Your product does not require maintenance as long as the instructions in the user manual are followed.



IMPORTER - MANUFACTURER



TESAN İLETİŞİM A.Ş.
ÇOBANÇEŞME MAHALLESİ BİLGE 1 SOK.
NO:17 YENİBOSNA / İSTANBUL
Tel : 0212 454 60 00
Fax : 0212 454 60 20
www.tesan.com.tr

Technical Service: 0212 454 60 70



The "LIFETIME" of the device is 3 years in terms of spare parts supply and proper functioning.
Note: Our company is not responsible for any errors that may occur during writing and printing.

*** This product complies with the WEEE Directive.

*** This product is marked in accordance with norms



and EAC regulations.

*** This product complies with the RoHS Directive.





RoHS Statement

All lead-free products of our company comply with the Restriction of the Use of Certain Hazardous Substances (RoHS) European directive. This means that our production processes and products are strictly "lead-free" and do not contain hazardous substances as defined in the directive.



The crossed-out wheeie bin symbol indicates this product should be collected separately within the European Union at the end of its lifetime. This applies to your product and its attachments that have this symbol. Please do not dispose of these products as unclassified domestic waste.





Proper disposal of this product

(Waste electrical and electronic equipment) (Applies to countries that have separate waste collection systems.)

This symbol on the product, accessories or relevant documentation indicates that this product and electronic accessories (e.g. charger, earphones, USB cable) should not be disposed of with other domestic waste. In order to eliminate the harmful effects of uncontrolled disposal of waste on the environment and human health, please separate this product from other waste and ensure that it is recycled for the sustainable reuse of material resources.

Home users should contact the Dealer of product or local authorities for information on where and how to return this product for safe recycling for environment.

Business users should contact their suppliers and check the terms and conditions of their purchase agreement. This product and its electronic accessories should not be mixed for disposal or with commercial wastes.

Complies with the WEEE Directive.



Proper disposal of battery

(Applies to countries that have separate waste collection systems.)

If you intend to dispose of the product, necessary measures will be taken in the waste collection areas for reprocessing and repairing of the product, including the battery.

The lifetime of this device is 3 years.

In case the product is found to be defective, the consumer will be entitled to the following rights as specified in Article 6502 of the Consumer Protection Law No. 6502;

- a- Cancel the contract,
- b- Request discount on sale price,
- c- Request repair free of charge,
- d- Request replacement of the defective product



INFORMATION ON CONSUMERS' ENTITLEMENT TO APPLY TO CONSUMER COURTS AND CONSUMER ARBITRATION TRIBUNALS FOR THEIR COMPLAINTS AND OBJECTIONS;

Consumers may apply to the Consumer Arbitration Tribunal or Consumer Court in their place of residence or consumption for disputes arising from or in connection with the exercising of rights under warranty.

OTHER RIGHTS, IF ANY, BESTOWED TO CONSUMERS

In the event that the Seller fails to produce this Warranty Certificate, consumer may apply to Directorate General of Consumer Protection and Market Surveillance under the Ministry of Customs and Trade.





INFORMATION ON ENERGY-EFFICIENT USAGE OF ENERGY-CONSUMING GOODS

For lifetime energy-efficient usage of the product you purchased, all maintenance services must be carried out by authorized certified personnel. Your device must be operated in environments that meet the environmental specifications in this user manual.



HEALTH, SAFETY AND ENVIRONMENTAL CONSIDERATIONS

Please keep your product away from heat sources such as radiators and ovens. Please dispose of your electronic product in recycle bins instead of domestic waste bins due to the negative effects of harmful components on human health and the environment.







with ♥ from ttec

