 




# AlumiSlim™ S

Universal Mobile Charger

User Manual

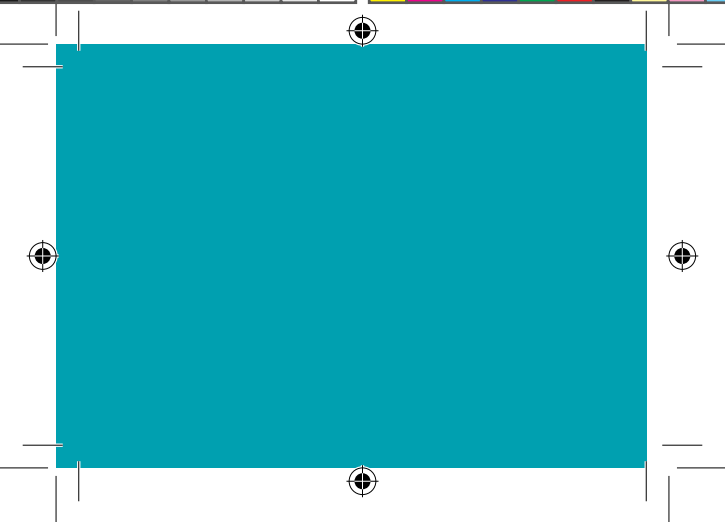



## Table of Contents

Thank You.....	4
Overview.....	5
Operation.....	6
Switching On and Off.....	7
How to charge the AlumiSlim S.....	8
Charging your device with the AlumiSlim S.....	10
Checking the remaining power capacity of the AlumiSlim S.....	11
Important safety instructions.....	12
Maintenance .....	16



## Thank you

 
Thank you for purchasing the AlumiSlim S Portable Charger. For optimum performance and safety, please read these instructions carefully before operating the product. Please keep your user manual for future reference.

### Specifications

- Capacity: 10.000mAh
- Battery Type: Li-Polymer
- Input: 1 x Micro USB Port, 1 x Lightning Port
- Output: 2 x USB Outputs
- Input: DC5V 2A(maximum)
- Output: DC5V2.1A(maximum)
- Charging Time: 6-7 hours
- Dimensions: 14.5 x 65.5 x 129.5 mm

## Overview


The AlumiSlim S Portable Charger includes the parts as shown in the following diagram:



### Contents of the package:

- 1 x AlumiSlim S Portable Charger
- 1 x Micro USB Cable
- 1 x User Manual
 
## Operation



- iPhone/iPod/iPad
- Samsung, LG, Sony, HTC, Nokia, Huawei, Motorola, BlackBerry, etc...
- Smart watches
- Digital cameras
- Portable Bluetooth devices such as earphones, car kits, and speakers
- Portable game consoles



## Switching On and Off

### Switching the AlumiSlim On and Off

*1. Switching the AlumiSlim S on:*

*Press the power button once. The LED power indicator will illuminate, showing that the device is on.*

*2. Switching the AlumiSlim S off:*

*If the AlumiSlim S is not connected to any device, the LED indicator will go off in 35 seconds and the AlumiSlim S will switch off.*



If there is no connected device, the LED indicators will go off after 35 seconds and the mobile power unit will automatically be switched off after 120 seconds.

## How to charge the AlumiSlim S

### How to charge the AlumiSlim S

Please connect your cable to the AlumiSlim S Micro USB port or Lightning port, and charging will start when you connect the USB connector to a USB-compatible charger or your computer.

- The LED lights will flash to indicate the charge status during the charging process.
- When the charging is finished, all of the 4 LED indicators will illuminate continuously.







## How to charge the AlumiSlim S



*When the AlumiSlim S is locked or goes into short-circuit protection mode due to misuse, please charge and restart it.*

*\* A charger and computer are not supplied with the product. The charging time depends on the charger's power output.*

## Charging your device with the AlumiSlim S

Suitable for the following devices:



iPad



iPhone



 
Phone



MP3/MP4



PSP



1. You can use your original USB data cable or the Micro USB cable included in the pack to connect your device.
2. Using the cable, connect your device to the USB port of the AlumiSlim S.
3. Press the power on button.
4. The LED power indicator will illuminate continuously when your device is being charged.
5. Disconnect your device after it is fully charged.



## Checking the remaining power capacity of the AlumiSlim S

- After you press the Power On/Off button, the LED lights will show the remaining capacity.
- The LED lights will go off automatically after approximately 35 seconds.

LED ● On / ○ Off / ● Flashing	Remaining
● ○ ○ ○	Less than 25%
● ● ○ ○	Between 25% and 50%
● ● ● ○	Between 50% and 75%
● ● ● ●	Between 75% and 99%
● ● ● ●	100%





## Important safety instructions

- In order to maximize battery life, please fully charge the AlumiSlim before the first use.
  - Please keep The alumiSlim S in a cool, dry place.
  - Please do not leave The AlumiSlim S in hot and humid environments.
  - The operating temperature should be between -10°C and 45°C.
  - If the AlumiSlim S has not been used for a long time, you should charge and discharge it at every three months.
  - The AlumiSlim S may get hot when charging a device. This is normal and there is no need for concern.
  - The battery performance will reduce in a few years under normal conditions.
  - Please do not put the AlumiSlim S in extremely hot environments or into fire.
  - Please do not use hazardous chemicals or detergents to clean the AlumiSlim S.
  - Misuse, dropping or excessive force may damage the device.
- 
- 





## Safety Information

- Please remove the product carefully from the packaging and store all the accessories in the box in order to avoid losing them. Please check the product for transportation damage. Please do not expose your device to shocks during transportation.
  - If your product is damaged and not working please notify your point of purchase immediately.
  - If your product has been shipped directly to you, please notify the shipper immediately.
  - There are no user-serviceable parts inside your product. In the case of faults please contact an authorized service station (Please see the list of authorized service stations) or the authorized seller that you purchased your product from.
- 
- 



## Information on misuse

- Errors caused by not using the product as specified in the manual,
  - Short circuits that occur when the product is used in hot and extremely humid environments,
  - Using additional connection cables other than those supplied by the manufacturer inside the product packaging,
  - User intervention or adding/removing parts,
  - External physical impact on the product and damage such as breaking the product,
  - Damaging or removing the product serial number,
  - Failure caused by not using the original accessories,
  - Damage caused by natural disasters such as fire, lightning, floods, and earthquakes.
- 
- 



## Disclaimer

This battery can only be used with compatible electronic equipment. Please read the instructions on your equipment's packaging to make sure this battery is suitable for your equipment. The manufacturer will not be held responsible for damage to electronic equipment that occurs during the usage of this product.





The manufacturer will not be held responsible for damage to the battery caused by misuse or by the intentional or unintentional actions of the buyer or third parties with regards to equipment and accessories that are not compatible with this battery. As stated above, the manufacturer will not be held responsible for damage to the battery due to misuse.





## Maintenance

**Your device is a product of advanced design and workmanship, and must be maintained properly. The following recommendations will help you preserve your warranty coverage.**

- 
- 
- Please store all accessories and attachments out of children's reach.
  - Please keep the device dry. Rain, moisture, and all kinds of liquids contain minerals that may be corrosive to electronic circuits. If your device gets wet please dry it thoroughly.
  - Please do not use or store the device in dusty and/or dirty environments. Moving parts and electronic parts may become damaged.
  - Please do not store the device in hot environments. High temperatures may shorten the life of electronic devices, damage batteries, and cause certain plastic parts to deform or melt.





- Please do not store the device in cold environments. When the device returns to normal temperature, moisture may build up inside it and electronic circuits may be damaged.
- Please take care not to drop, bang or shake the device. Rough handling may cause breaking of internal circuits and sensitive mechanical parts.
- Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the device.
- Do not paint the device. Paint may restrict the moving parts and prevent them from functioning properly.





All the recommendations above apply to the device, batteries, charger or all the other accessories. If the device does not function properly, please take it to the nearest authorized service center.





## Technical Assistance for Damages

- 
- 
- Product fails to operate due to not following operating instructions,
  - An unexpected change in performance,
  - Product is dropped or damaged,
  - Problems due to improper use or negligence,
  - Damage to power source or connection cable,
  - Liquid spillage or insertion of objects into the product,
  - Opening or removing any of the labels,
  - Any signs of attempts to open and/or tamper with the product.



## INFORMATION ON MAINTENANCE, REPAIR, AND PRODUCT CLEANING

Your product does not require maintenance as long as the instructions in the user manual are followed.

The "LIFETIME" of the device is 3 years in terms of spare parts supply and proper functioning.

Note: Our company is not responsible for any errors that may occur during writing and printing.

\*\*\* This product complies with the AEEE Directive.

\*\*\* This product is marked in accordance with   and  regulations.

\*\*\*This product complies with the RoHS Directive.





### RoHS Statement

All our company's lead-free products comply with the Restriction of the Use of Certain Hazardous Substances (RoHS) European directive. This means that our production processes and products are strictly "lead-free" and do not contain hazardous substances as defined in the directive.



The crossed-out wheeled bin symbol indicates this product should be collected separately within the European Union at the end of its lifetime. This applies to your product and its attachments that have this symbol. Please do not dispose of these products as unclassified domestic waste.



### Proper disposal of this product

(Electrical and electronic equipment waste) (Applies to countries that have separate waste collection systems.)

This symbol on the product, accessories or relevant documentation indicates that the product and electronic accessories (e.g. charger, earphones, USB cable) should not be disposed of with other domestic waste. In order to eliminate the harmful effects of uncontrolled waste disposal on the environment and human health, please separate this from other waste and ensure that it is recycled for the sustainable reuse of material resources.

Home users should contact the product Dealer or local authorities for information on where and how to return this product for safe recycling to protect the environment.

Business users should contact their suppliers and check the terms and conditions of their purchase agreement. This product and its electronic accessories should not be mixed for disposal or with commercial waste. Complies with the AEEE Directive.



### **Proper disposal of the battery**

(Applies to countries that have separate waste collection systems.)

If you intend to dispose of the product, the necessary measures must be taken in the waste collection areas for the reprocessing and repairing of the product, including the battery.

The lifetime of this device is 3 years.





*with ♥ from ttec*