



# Macaron™ Mini

Retractable Bluetooth® Headset

User Manual

[www.hellottec.com](http://www.hellottec.com)

## Table of Contents

Thank You .....	4
Macaron Mini Bluetooth Headset Overview .....	5
Cord Winder .....	7
How to Put on Your Earphones .....	8
Charging your Earphones .....	9
Operation .....	10
Initial Pairing with Mobile Phone .....	10
Pairing the Earphones with a Bluetooth®-enabled Mobile Phone .....	10
Pairing the Earphones with Two Bluetooth®-enabled Mobile Phones (Multi-Point) .....	11
Reconnecting Your Earphones .....	12
How to Use Your Earphones .....	13
Troubleshooting .....	15
Safety Precautions .....	16
Maintenance .....	17
Important Safety Instructions .....	20
Warning .....	23

## Thank You

Thank you for purchasing Macaron Mini earphones with a cord winder. Macaron Mini features Bluetooth version V3.0, a technology which improves sound quality, increases the product's operating range and reduces energy consumption.

### **What's in the Box:**

- 1 x Bluetooth Earphones with Winder
- 1 x Charging Cable
- 1 x User Manual
- 2 x Gel Earbuds (both L and S sizes)

The earphones are designed to clip onto your clothing. Pull the earphones without applying excessive force and extend the cord. The length can be adjusted by pressing the rewind button on the top.


## Macaron Mini Bluetooth Earphones Overview

### Product Specifications:

Bluetooth® Version	v3.0
Supported Bluetooth® Profiles	Earphones and Hands-Free
Operating Range	10 meters
Operating Temperature	0-50 degrees Celsius
Charging Time	Approximately 1 Hour
Talk Time*	Up to 5 Hours
Standby Time*	Up to 110 Hours
Battery Type and Capacity	Rechargeable 60mAh Li-Polymer
Dimensions	47 (L) x 26 (W) x 14.5 (H) mm
Weight	18 g

\* May vary depending on mobile phone settings and mobile network operator.

## Macaron Mini Bluetooth Earphones Overview

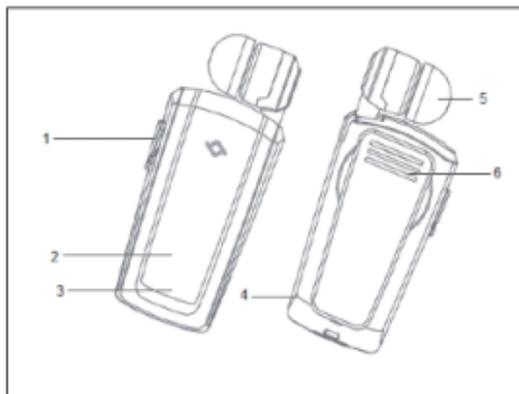


1. Rewind Button
2. Multifunction Button (MFB)
3. Status Indicator
4. Microphone
5. Speaker
6. Clips
7. Micro USB Charging Port





## Cord Winder

Earphones cord can be extended by gently pulling the cord. The cord can be rewound (shortened) by pressing the Rewind Button.

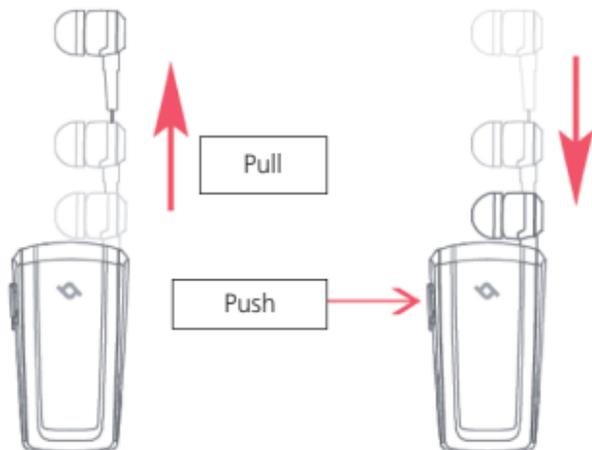

## How to Put on Your Earphones?

Macaron Mini is designed to clip onto your clothing.

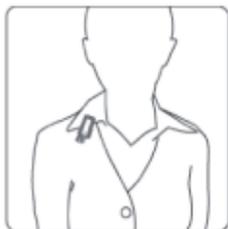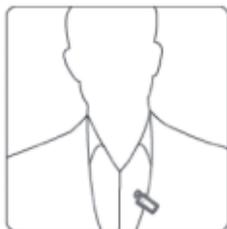

## Charging your Earphones

In order to fully charge the battery before you start using Macaron Mini Bluetooth Earphones, please connect one end of the charging cable to a USB power source (e.g. Computer) and the other end to the micro USB charging port of the earphones.

<b>Status</b>	<b>Status Indicator</b>
1. Charging	Red light illuminates
2. Full Battery	Off
3. Low battery	Red light flashes every 5 seconds
4. Empty battery	Off

- Only use the supplied charging cable to charge the device.
- Fully recharge the battery every 6 months in order to prolong the battery life.
- If the earphones have not been used for a long time, it will take some time for the charge indicator to appear.

## Operation

### Switching the Earphones On and Off:

#### A. Switching On

Press the Multifunction Button (MFB) and hold until status indicator turns blue.

#### B. Switching Off

Press the Multifunction Button (MFB) and hold until status indicator turns red.

### Initial Pairing with Mobile Phone

1. When you switch your earphones on for the first time, they will automatically switch to pairing mode and the blue light will remain illuminated.
2. Make your Bluetooth® function of your phone visible to all Bluetooth®-enabled devices nearby.
3. Select Macaron Mini on your phone's screen and press "OK" to connect to the earphones.
4. When pairing is done, the status indicator of the earphones will go off.

### Pairing the Earphones with a Bluetooth®-enabled Mobile Phone

1. Enable the Bluetooth® function of your mobile phone.
2. Make sure the earphones are switched off.
3. To activate the earphones' pairing mode press the Multifunction Button (MFB) and hold until the blue light remains illuminated.

4. Run a search for the earphones, select "Macaron Mini" and enter "0000" as the password. A password is not necessary if your mobile phone supports the "Easy Pairing" function.
5. When pairing is complete the blue light will go off.

#### **Pairing the earphones with two Bluetooth®-enabled Mobile Phones (Multi-Point)**

1. Pair your earphones with the first mobile phone (follow the steps in "Pairing your Earphones with Bluetooth-enabled Mobile Phone").
2. Switch off the earphones and Bluetooth function of the first paired phone.
3. Pair your earphones with the second mobile phone (follow the steps in "Pairing your Earphones with Bluetooth-enabled Mobile Phone").
4. Activate Bluetooth connection with the earphones and the first paired phone from the phone menu.
  - Some phones may need to be connected to the earphones by pressing the "Connect" button.
  - If pairing is not completed in two minutes, the earphones will automatically switch to standby mode and switch off after three minutes. Repeat the steps to reconnect both devices.

## Reconnecting your Earphones

1. If the earphones switch off, they will automatically reconnect to the phone after switching on.
2. If the phone is switched off and the earphones are disconnected, you will need to reconnect the earphones by using the Bluetooth menu when the phone is switched on again. Otherwise, the earphones will switch off.

## How to Use Your Earphones

Function	Button	Volume (Earphones)	Status Indicator
Incoming Call		Warning tone	Blue light turns on 3 times every 3 seconds
Answering a Call	Press the MFB button once to accept	One warning tone	Blue light flashes every 5 seconds during the call
Rejecting a Call	Press the MFB button twice	One warning tone	---
During the call, directly reject a second call on the other connected phone.			
Ending a Call	Press the MFB button once	One warning tone	---
Voice Call	Hold the MFB button down	One warning tone	---
Last Number Redial	Press the MFB button twice	One warning tone	---
Out of Coverage warning	---	One warning tone	Blue light flashes twice every 3 seconds
The earphones will reconnect in 5 minutes, otherwise they will switch off. If the automatic reconnection feature is not supported, please use the Bluetooth menu to reconnect.			
Call Transfer (from earphones to phone / from phone to earphones)	Press the MFB button twice during a call	One warning tone	Calling from the earphones: Blue light flashes once every 5 seconds. Calling from the phone: Blue light flashes continuously.

## How to Use Your Earphones

Function	Button	Volume (Earphones)	Status Indicator
Volume Adjustment	Adjust from your mobile phone	---	---
Standby mode when phone is connected	---	---	---
Resetting (list of paired devices)	Press the MFB button and hold for 5 seconds (only in pairing mode)	Two warning tones	Red light flashes once
Standby mode when phone is not connected	---	---	Blue light flashes twice every 3 seconds

- The ttec Macaron Mini is designed for mobile phones with a Bluetooth Hands-Free profile (or for a Bluetooth device). Since some phones have different operating systems it is not guaranteed that all of the features will function.
- In order to receive better and clearer signals during calls, make sure there isn't anything obstructing the path between the earphones and your phone.



## Troubleshooting

### **I cannot adjust the volume on my earphones.**

- Please adjust the volume from your mobile phone.

### **I cannot connect to my mobile phone.**

- Please make sure your earphones are switched on and fully charged.
- Please make sure your mobile phone's Bluetooth feature is enabled.
- Please make sure the earphones are in pairing mode (blue light illuminates)
- Please make sure your earphones are within your mobile phone's range.
- Please make sure your phone is visible to all Bluetooth devices nearby (when the earphones are in easy pairing mode).
- Please wait for a few seconds when searching for Bluetooth devices.

If the above steps do not solve the problem, please switch the earphones off, recharge them and try again.

### **I cannot hear audio from my earphones.**

- Please make sure your earphones are switched on and fully charged.
- Please make sure your earphones are paired with and connected to your mobile phone.
- Please make sure the call has not been transferred to your phone.
- Please make sure the volume is sufficiently high.

### **I cannot switch the earphones off.**

Please press and hold down the MFB button for a few moments. Otherwise, charge your earphones for 2-3 seconds and disconnect the charger. Your earphones will now switch off.

### **I cannot switch the earphones on.**

Please make sure your earphones are switched on and fully charged; otherwise, charge your earphones for 1-1.5 hours and switch them on again.

### **I hear a warning tone from the earphones during the call.**

Low battery warning, please charge your earphones.

### **I hear a noise during the call.**

There may be an obstacle between your earphones and mobile phone. Please remove this obstacle. Or, put your phone on a table rather than holding it with your hands.

### **Safety Precautions**

1. If you accidentally apply excessive force to the rewind button the earphones cord rewind pullback may be damaged.
2. Please be careful when rewinding the earphones cord. Maintain a safe distance between your face and the earphones.

3. If you must use the earphones when driving, please focus all your attention on your driving. Act as a responsible driver and obey local laws.
4. Please store out of children's reach and never let children play with the earphones. Children may swallow small parts.
5. Observe these rules in certain places where electrical devices must be switched off such as hospitals, electrically limiting and hazardous areas.
6. Switch your earphones off before boarding a plane. Do not use your earphones after the flight attendant has instructed you not to do so.
7. Never put or store your earphones in the deployment zone of airbags; otherwise serious injuries may occur when the airbag is deployed.
8. As they don't have any repairable parts, please do not attempt to open your earphones.
9. The earphones have internal batteries. Therefore, dispose of the earphones in accordance with local regulations and do not treat them as domestic waste.

### **Maintenance**

**Your device is the result of sophisticated design and masterful craftsmanship thus, its maintenance must be carried out with special care. The following recommendations will help you preserve your warranty coverage.**

- Please store all accessories and attachments out of children's reach.

- Please keep the device dry. Rain, moisture, and all kinds of liquids contain minerals that may be corrosive to electronic circuits. If your device gets wet please dry it thoroughly.
- Please do not use or store the device in dusty and/or dirty environments. Moving parts and electronic parts may be damaged.
- Please do not store the device in hot environments. High temperatures may shorten the life of electronic devices, damage batteries, and cause certain plastic parts to deform or melt.
- Please do not store the device in cold environments. When the device returns to normal temperature, moisture may build up inside it and the electronic circuits may be damaged.
- Please avoid dropping, impacts and shaking. Rough handling may cause breakage of internal circuits and sensitive mechanical parts.
- Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the device.
- Do not paint the device. Paint may restrict the moving parts and prevent them from functioning properly.

All the recommendations above apply to the device, battery, charger and all other accessories. If any device does not function properly, please take it to the nearest authorized service center.

## Information On Misuse

- Errors arising from failure to use the product as indicated in the manual,
- Short-circuiting of the product when it is operated in hot and extremely humid environments,
- Using connection cables other than those that have been provided in the product's package by the manufacturing company,
- Interventions by the user or inserting or removing parts,
- Exterior damages to products such as physical impacts and breaks,
- Destroying or removing the serial number of the product,
- Malfunctions arising from not using the original consumable materials,
- Damages resulting from natural disasters such as fire, lightning, flood, earthquake.

### Points to Consider When Handling

Remove the product carefully from its box, and keep all the accessories within the box in order not to lose them. Check the product against any possible damages during transportation. If your product is damaged and not working, immediately notify the supplier. If your product was directly sent to you, promptly inform the sender company. Only the buyer (the customer or company that bought the product) may claim transportation-related damages.

## Important Safety Instructions

- Before using the product, make sure to read all the safety warnings and usage instructions.
- Use the product as indicated in the user's manual.
- Do not use the product in places close to water.
- Keep the product away from heat sources.
- Keep the product away from humid environments. Protect it against rough use and humidity.
- Do not insert any objects in the product or pour liquid on it.
- Never expose the product to water and humidity. Otherwise, it may cause electric shock risks.
- Do not cause damages to the cable by pulling it by applying extreme force.
- Keep it away from places receiving direct sunlight and do not expose it to direct sunlight.
- Before using the product, make sure to read all the safety warnings and usage instructions.
- Use the product as indicated in the user's manual.
- Do not use the product in places close to water.
- Keep the product away from heat sources.
- Keep the product away from humid environments. Protect it against rough use and humidity.
- Do not insert any objects in the product or pour liquid on it.
- Never expose the product to water and humidity. Otherwise, it may cause electric shock risks.

- Do not cause damages to the cable by pulling it by applying extreme force.
- Keep it away from places receiving direct sunlight and do not expose it to direct sunlight.
- Do not place your product on another object or an unstable desk. Otherwise, the product may fall and be damaged.
- The product must be disconnected from the PC before it is cleaned. Do not use liquid cleaning agents. Use damp cloth for cleaning.

#### **Rules to Follow During Use**

- Please read the "INTRODUCTION and USER'S MANUAL" carefully before using the product.
- Keep your product away from heat sources.
- Make sure that no liquid is spilled on your product or it is not in contact with liquids.
- Never expose the product to water and humidity. Otherwise, it may cause electric shock risks.
- Use your product as indicated in the user's manual.
- Do not expose your product to dust.
- When your product and its accessories are not in use, remove the plug from the socket.

#### **Points to Consider When Handling**

Do not expose your product to any impact when handling.

### **Warnings About Human and Environmental Health**

Keep your product away from heat sources such as radiators and ovens. Due to the adverse effects of its components that are harmful to human and environmental health, your electronic product should not be thrown in waste bins but recycling bins.

### **Information on the Maintenance, Repair and Cleaning that the Consumer Can Perform**

Your product does not contain any maintainable parts; in case of a malfunction, refer to the authorized service stations (See the list showing the authorized service stations) or the authorized dealer from whom you have bought your product.

### **Periodical Maintenance**

Post-warranty technical maintenance can only be performed in authorized service stations.

### **Connection and Assembly**

The connection and assembly are performed by the consumer as shown in the user's manual. Please contact the authorized service station in case of any connection and assembly related problems (See the list showing the authorized service stations).

### **Economic Life**

The "ECONOMIC LIFE" needed for your device to fulfill its functions is 3 years in terms of spare parts supply.

## **WARNING**

Long-term exposure to high volumes may result in permanent hearing loss. Use the product at lower volumes as much as possible and avoid long-term use of earphones at extreme volumes. Please read the following guiding rules for safety before using the earphones.

### **(Please follow these steps before using the product)**

1. Please adjust the volume to lowest before putting on the earphones.
2. Put the earphones on and adjust the volume slowly to a comfortable level.

### **(When using this product)**

1. Keep the volume as low as possible.
2. If you need to increase the volume, adjust the volume slowly.
3. If you are experiencing any discomfort or ringing in your ears, please stop using the earphones. Your ears may get used to high volumes as a result of always using the earphones at high volumes, which may permanently damage your hearing without feeling any discomfort.

## **IMPORTANT**

- Please fully charge SoundBeat Pro prior to first use.
- You need to recharge SoundBeat Pro if it has not been used for longer than 6 months.
- You should use an approved charger to charge the SoundBeat Pro.

## Technical Support for Damages

- Product fails to operate due to not following operating instructions,
- An unexpected change in performance,
- Product is dropped or damaged,
- Problems due to improper or careless use,
- Damage to power source or connection cable,
- Liquid spillage or insertion of objects inside the product,
- Opening or removing any of the covers,
- Any signs of attempts to open and/or tamper with the product.

## MAINTENANCE, REPAIR AND PRODUCT CLEANING INFORMATION

Your product does not require maintenance as long as the of the user manual instructions are followed.

\*\*\* This product is marked in accordance with  and  regulations.

\*\*\* This product is RoHS compliant.



### RoHS Statement

All lead-free products of our company comply with the Restriction of the Use of Certain Hazardous Substances (RoHS) European directive. This means that our production processes and products are strictly “lead-free” and do not contain hazardous substances as defined in the directive.



## Correct Disposal Of This Product

(Waste electrical and electronic devices) (For countries that have separate collection systems)

This symbol found on the product, its accessories or relevant documents indicates that the product and its electronic accessories (e.g. charging device, earphones, USB cable) should not be disposed of along with other domestic wastes. In order to prevent the harmful effect of uncontrolled disposal of wastes on the environment and human health, please separate it from other types of waste and ensure the recycling of material sources for their sustainable reuse. Domestic users should contact their Dealer or the local authority for detailed information on where to take this product and how to do it for an environmentally safe recycling. Industrial users should contact their supplier and check the provisions and conditions of the purchasing agreement. This product and its electronic accessories should not be mixed with the wastes to be destroyed or commercial wastes.



### **Correct Disposal Of the Battery**

(For countries that have separate collection systems)

If you intend to dispose of the product, necessary precautions should be taken for reprocessing and repair of the product, including its battery, at the waste collection area.

The economic life of this product is 3 years.

The crossed-out wheeled bin symbol symbolizes that the product must be collected separately at the end of its economic life within the European Union. This applies to your product that bears this symbol and its accessories. Do not dispose of these products as unclassified urban waste.

*with ♥ from ttec*