



PowerStones™

Universal Powerbanks With Charging Station

User Manual



www.hellottec.com

Table of Contents



Thank You.....	4
Overview.....	5
Operation.....	6
Switching On and Off.....	7
How to charge the PowerStones.....	8
Charging your device with the PowerStones.....	10
Checking the remaining power capacity of the PowerStones.....	11
Important safety instructions.....	12
Maintenance	16



Thank you

 
Thank you for purchasing PowerStones Universal Powerbanks With Charging Station. For optimum performance and safety, please read these instructions carefully before operating the product. Please keep your user manual for future reference.

Specifications

- 
- Capacity: 5000mAh + 5000mAh
 - Battery Type: Li-ion
 - Input: 1 x Micro USB Port
 - Output: 1 x USB Output
 - Input: DC5V 1.5A (maximum)
 - Output: DC5V2.1A
 - Charging Time: 4 hours
- 


Overview

PowerStones Universal Powerbanks With Charging Station includes the parts shown in the following figure:




Contents of the package:

 - 2 x PowerStones Universal Powerbanks
- 1 x Charging Station
- 1 x USB Cable
- 1 x User Manual

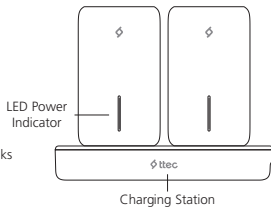

Operation

 

iPad



iPhone



Phone





MP3/MP4



PSP

- iPhone/iPod/iPad
- Samsung, LG, Sony, HTC, Nokia, Huawei, Motorola, BlackBerry, etc...
- Smart watches
- Digital cameras
- Portable Bluetooth devices such as earphones, car kits, and speakers
- Portable game consoles



Switching On and Off

Switching PowerStones On and Off

1. Switching the PowerStones on:

When you connect your device to the Universal Powerbanks With Charging Station, the LED power indicator will automatically illuminate, showing that the Universal Powerbanks With Charging Station is on.

2. Switching the PowerStones off:

If PowerStones is not connected to any device, the LED power indicator will go off in 30 seconds and PowerStones will switch off.



If no device is connected, the LED indicators will go off after 30 seconds and the mobile power unit will automatically be switched off after 120 seconds.

How to charge PowerStones

Charging PowerStones

Please connect your cable to PowerStones charger dock or Micro USB port of mobile battery. Charging will begin when you connect the USB connector to a USB-compatible charger or your computer.

- LED power indicator will continuously flash to indicate the charge status during charging process.
- When charging is complete, all LED power indicators will remain illuminated.





How to charge PowerStones

 


When PowerStones is locked or enters into short-circuit protection mode due to misuse, please charge and restart it.

**A charger and computer are not supplied with the product. The charging time depends on the output power of the charger.*

Charging your device with PowerStones

Suitable for the following devices:



iPad



iPhone



Phone



MP3/MP4











PSP

1. You can use the original USB data cable or Micro USB cable supplied with your product in order to connect your device.
2. Connect your device to the PowerStones's USB output with the cable.
3. LED power indicator will illuminate automatically.
4. The LED power indicator will remain illuminated while your device is being charged.
5. Disconnect your device when it is fully charged.



Checking the remaining power capacity of the PowerStones

- When you remove Universal Powerbanks With Charging Station from the dock, the LED power indicator will show the remaining capacity.

LED  On /  Off /  Flashing	Remaining Capacity
	Less than 25%
	Between 25% and 50%
	Between 50% and 75%
	Between 75% and 99%
	100%





Important safety instructions

- In order to maximize battery life, please fully charge PowerStones before first use.
 - Please keep PowerStones in a dry and cool place.
 - Please do not leave PowerStones in hot and humid environments.
 - Operating temperature should be between -10°C and 45°C.
 - If PowerStones is not being used for a long time, you should charge and discharge it every three months.
 - PowerStones may get hot when charging a device. This is normal and there is no need for concern.
 - Battery performance will reduce in a few years under normal conditions.
 - Please do not put PowerStones in extremely hot environments or into fire.
 - Please do not use hazardous chemicals or detergents to clean PowerStones.
 - Misuse, dropping or excessive force may damage the device.
- 
- 





Safety Information

- Please remove the product carefully from the packaging and store all the accessories in the box in order to avoid losing them. Please check the product for transportation damage. Please do not expose the product to any impacts during transport.
 - If your product is damaged and not operating, please notify your point of purchase immediately.
 - If your product has been shipped directly to you, please notify the shipper immediately.
 - There are no user-serviceable parts inside your product. In the case of faults please contact an authorized service station (Please see the list of authorized service stations) or authorized seller that you purchased your product from.
- 
- 



Information on misuse

- Errors caused by not using the product as specified in the manual,
 - Short circuits that occur when the product is used in hot and extremely humid environments,
 - Using additional connection cables other than those supplied by the manufacturer inside the product packaging,
 - User intervention or adding/removing parts,
 - External physical impact on the product and damage such as breaking the product,
 - Damaging or removing the product serial number,
 - Failure caused by not using the original accessories,
 - Damage caused by natural disasters such as fire, lightning, floods, and earthquakes.
- 
- 



Disclaimer

This battery can only be used with compatible electronic equipment. Please read the instructions on your equipment's packaging to make sure this battery is suitable for your equipment. The manufacturer will not be held responsible for damage to electronic equipment that occurs during the usage of this product.





The manufacturer will not be held responsible for damage to the battery caused by misuse or by the intentional or unintentional actions of the buyer or third parties with regards to equipment and accessories that are not compatible with this battery. As stated above, the manufacturer will not be held responsible for damage to the battery due to misuse.





Maintenance

Your device is a product of advanced design and workmanship, and must be maintained properly. The following recommendations will help you preserve your warranty coverage.

- 
- 
- Please store all accessories and attachments out of children's reach.
 - Please keep the device dry. Rain, moisture, and all kinds of liquids contain minerals that may be corrosive to electronic circuits. If your device gets wet please dry it thoroughly.
 - Please do not use or store the device in dusty and/or dirty environments. Moving parts and electronic parts may become damaged.
 - Please do not store the device in hot environments. High temperatures may shorten the life of electronic devices, damage batteries, and cause certain plastic parts to deform or melt.



· Please do not store the device in cold environments. When the device returns to normal temperature, moisture may build up inside it and electronic circuits may be damaged.

· Please take care not to drop, bang or shake the device. Rough handling may cause breaking of internal circuits and sensitive mechanical parts.



· Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the device.





· Do not paint the device. Paint may restrict the moving parts and prevent them from functioning properly.

All the recommendations above apply to the device, batteries, charger or all the other accessories. If the device does not function properly, please take it to the nearest authorized service center.





Technical Assistance for Damages

- 
- Product fails to operate due to not following operating instructions,
 - An unexpected change in performance,
 - Product is dropped or damaged,
 - Problems due to improper use or negligence,
 - Damage to power source or connection cable,
 - Liquid spillage or insertion of objects into the product,
 - Opening or removing any of the labels,
 - Any signs of attempts to open and/or tamper with the product.
- 



INFORMATION ON MAINTENANCE, REPAIR, AND PRODUCT CLEANING

Your product does not require maintenance as long as the instructions in the user manual are followed.

The "LIFETIME" of the device is 3 years in terms of spare parts supply and proper functioning.

Note: Our company is not responsible for any errors that may occur during writing and printing.

*** This product complies with the WEEE Directive.

*** This product is marked in accordance with  regulations.

***This product complies with the RoHS Directive.





RoHS Statement

All our company's lead-free products comply with the Restriction of the Use of Certain Hazardous Substances (RoHS) European directive. This means that our production processes and products are strictly "lead-free" and do not contain hazardous substances as defined in the directive.



The crossed-out wheeled bin symbol indicates this product should be collected separately within the European Union at the end of its lifetime. This applies to your product and its attachments that have this symbol. Please do not dispose of these products as unclassified domestic waste.



Proper disposal of this product

(Electrical and electronic equipment waste) (Applies to countries that have separate waste collection systems.)

This symbol on the product, accessories or relevant documentation indicates that the product and electronic accessories (e.g. charger, earphones, USB cable) should not be disposed of with other domestic waste. In order to eliminate the harmful effects of uncontrolled waste disposal on the environment and human health, please separate this from other waste and ensure that it is recycled for the sustainable reuse of material resources.

Home users should contact the product Dealer or local authorities for information on where and how to return this product for safe recycling to protect the environment.

Business users should contact their suppliers and check the terms and conditions of their purchase agreement. This product and its electronic accessories should not be mixed for disposal or with commercial waste. Complies with the AEEE Directive.



Proper disposal of the battery

(Applies to countries that have separate waste collection systems.)

If you intend to dispose of the product, the necessary measures must be taken in the waste collection areas for the reprocessing and repairing of the product, including the battery.

The lifetime of this device is 3 years.





with ♥ from ttec