



# PowerUp™ Multi

Universal Powerbank

User Manual





[www.hellottec.com](http://www.hellottec.com)



## Table of Contents

Thank You.....	4
Overview.....	5
Operation.....	6
Switching On and Off.....	7
How to charge the PowerUp Multi.....	8
Charging your device with the PowerUp Multi.....	10
Checking the remaining power capacity of the PowerUp Multi.....	11
Important safety instructions.....	12
Maintenance .....	16






## Thank You

Thank you for purchasing the PowerUp Multi. For optimum performance and safety, please read these instructions carefully before operating the product.  
Please keep your user manual for future reference.

 


### Specifications

- |                  |                             |                                    |
|------------------|-----------------------------|------------------------------------|
| • Capacity:      | 15.600mAh                   | 20.800mAh                          |
| • Battery Type:  | Lithium-Ion Battery         | Lithium-Ion Battery                |
| • Input:         | 1 x Micro USB Port          | 1 x Micro USB Port                 |
| • Output:        | 4 x USB Outlets             | 4 x USB Outlets                    |
| • Input:         | DC5V 2A(maximum)            | DC5V 2A(maximum)                   |
| • Output:        | DC5V 2.1A/1A/1A/1A(3A Max.) | DC5V 2.4A+2.4A+2.4A+2.4A (4A Max.) |
| • Charging Time: | 8-9 hours                   | 12 hours                           |
- 

## Overview


The PowerUp Multi Portable Charger includes the parts as shown in the following

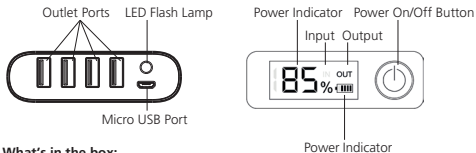


### What's in the box:

- 1 x PowerUp Multi Portable Charger
- 1 x Micro USB Cable
- 1 x User Manual
 
## Operation

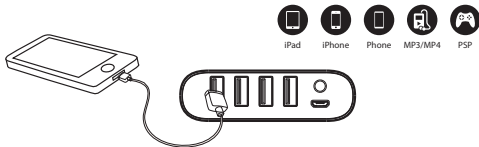

- iPhone/iPod/iPad
- Samsung, LG, Sony, HTC, Nokia, Huawei, Motorola, BlackBerry, etc...
- Smart watches
- Digital cameras
- Portable Bluetooth devices such as earphones, car kits, and speakers
- Portable game consoles



## Switching On and Off

### Switching the PowerUp Multi On and Off

*1. PowerUp Multi'nin açılması:*

Press the power button once. The LCD power indicators will illuminate, showing that the device is on.

*2. Switching the PowerUp Multi Off:*

If the PowerUp Multi is not connected to any device, the LCD indicators will go off in 15 seconds and the PowerUp Multi will switch off in 30 seconds.



*If no device is connected, the LCD indicators will go off in 15 seconds and the mobile power supply will be switched off automatically after 30 seconds.*

## How to charge the PowerUp Multi

### Charging the PowerUp Multi

Connect the Micro USB end of the supplied USB charge cable to the PowerUp Multi inlet port (as shown below). Then, connect the USB connector to a computer or an DC power supply with a 5 V USB outlet port.

The LCD display will show "In:" when the PowerUp Multi is being charged. The LCD display will show 100% when the PowerUp Multi is fully charged.









## How to charge the PowerUp Multi



**Important:** Please check the voltage compatibility of your device before using it.



You can use your original USB data cable or Micro USB cable included in the package to connect your device. Using the cable, connect your device to the portable charger's USB port. Press the power on/off button. The LCD display will show "Out" when your device is being charged. When your device is fully charged, please disconnect it.



## Charging your device with the PowerUp Multi

Compatible with the following devices:



iPad



iPhone



Phone



MP3/MP4

 


PSP

1. You can use your original USB data cable or Micro USB cable included in the pack to connect your device.
2. Using the cable, connect your device to the PowerUp Multi's USB port.
3. Press the power on button.
4. When your device is being charged, the LCD indicators will go off after 15 seconds. Then, the message "OUT" will remain illuminated.
5. When your device is fully charged, please disconnect it.

## Checking the remaining power capacity of the PowerUp Multi

- After pressing the power On/Off button, the LCD display will show the remaining capacity.
- After approximately 15 seconds, the LCD indicators will go off and the PowerUp Multi will be switched off within 30 seconds.

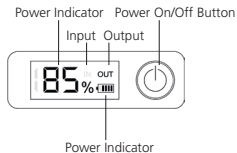



## Flash Lamp

Hold the the power button to turn the flash lamp on/off.





## Important safety instructions

- In order to maximize battery life, please fully charge the PowerUp Multi before its first use.
  - Please keep the PowerUp Multi in a cool, dry place.
  - Please do not leave the PowerUp Multi in hot and humid environments.
  - The operating ambient temperature must be between -10°C and 45°C.
  - If the PowerUp Multi has not been used for a long time, you should charge and discharge it at every three months.
  - The PowerUp Multi may get hot when charging a device. This is normal and there is no need for concern.
  - Battery performance will reduce in a few years under normal conditions.
  - Please do not put the Power Up Multi into extremely hot environments or into fire.
  - Please do not use hazardous chemicals or detergents to clean the Power Up Multi.
  - Misuse, dropping or excessive force may damage the device.
- 
- 





## Safety Information

- Please remove the product carefully from the packaging and store all the accessories in the box in order to avoid losing them. Please check the product for transportation damage. Please do not expose your device to shocks during transportation.
  - If your product is damaged and not operating, please notify your point of purchase immediately.
  - If your product has been shipped directly to you, please notify the shipper immediately.
  - There are no user-serviceable parts inside your product
- 
- 




## Information on misuse

- Errors caused by not using the product as specified in the manual,
  - Short circuits that occur when the product is used in hot and extremely humid environments,
  - Using different connection cables than those supplied by the manufacturer in the product packaging,
  - User intervention or adding/removing parts,
  - External physical impact on the product and damage such as breaking the product,
  - Damaging or removing the product serial number,
  - Failure caused by not using the original accessories,
  - Damage caused by natural disasters such as fire, lightning, floods, and earthquakes.
- 
- 




## Disclaimer

This battery can only be used with compatible electronic equipment. Please read the instructions on your equipment's packaging to make sure this battery is suitable for your equipment. The manufacturer will not be held responsible for damages to electronic equipment that occur during the usage of this product.





The manufacturer will not be held responsible for damages to the battery caused by misuse or by the intentional or unintentional actions of the buyer or third parties with regards to equipment and accessories that are not compatible with this battery. As stated above, the manufacturer will not be held responsible for damages to the battery due to misuse.





## Maintenance

**Your device is a product of advanced design and workmanship, and must be maintained properly. The following recommendations will help you preserve your warranty coverage.**

- 
- Please store all accessories and attachments out of children's reach.
  - Please keep the device dry. Rain, moisture, and all kinds of liquids contain minerals that may be corrosive to electronic circuits. If your device gets wet please dry it thoroughly.
  - Please do not use or store the device in dusty and dirty environments. Moving parts and electronic parts may become damaged.
  - Please do not store the device in hot environments. High temperatures may shorten the life of electronic devices, damage batteries, and cause certain plastic parts to deform or melt.
- 





· Please do not store the device in cold environments. When the device returns to normal temperature, moisture may build up inside it and electronic circuits may be damaged.

ir

· Please take care not to drop, bang or shake the device. Rough handling may cause breaking of internal circuits and sensitive mechanical parts.



· Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the device.



· Do not paint the device. Paint may restrict the moving parts and prevent them from functioning properly.

All the recommendations above apply to the device, battery, charger and all other accessories. If any part of the device does not function properly, please take it to the nearest authorized service

17





## Technical Assistance for Damages


- Product fails to operate due to not following operating instructions,
  - An unexpected change in performance,
  - Product is dropped or damaged,
  - Problems due to improper use or negligence,
- Damage to power source or connection cable,
- Liquid spillage or insertion of objects inside the product
  - Opening or removing any of the labels,
  - Any signs of attempts to open and/or tamper with the product.



## **INFORMATION ABOUT MAINTENANCE, REPAIR, AND PRODUCT CLEANING**

Your product does not require maintenance as long as the instructions in the user manual are followed.





The "LIFETIME" of the device is 3 years in terms of spare part supply and proper functioning.

Note: Our company is not responsible for any errors that may occur during writing and printing.

\*\*\* This product complies with the AEEE Directive.

\*\*\* This product is marked in accordance with  regulations.

\*\*\*This product complies with the RoHS Directive.





**RoHS Statement**

All our company's lead-free products comply with the Restriction of the Use of Certain Hazardous Substances (RoHS) European directive. This means that our production processes and products are strictly "lead-free" and do not contain hazardous substances as defined in the directive.



The crossed-out wheelee bin symbol indicates this product should be collected separately within the European Union at the end of its lifetime. This applies to your product and its attachments that have this symbol. Please do not dispose of these products as unclassified domestic waste.



### Proper disposal of this product

(Waste electrical and electronic equipment) (Applies to countries that have separate waste collection systems.)

This symbol on the product, accessories or relevant documentation indicates that the product and its electronic accessories (e.g. charger, earphones, USB cable) should not be disposed of with other domestic waste. In order to eliminate the harmful effects of the uncontrolled disposal of waste on environment and human health, please separate this product from other waste and ensure that it is recycled for the sustainable reuse of material resources.

Home users should contact the product Dealer or the local authority for information on where and how to dispose of this product for safe recycling and protection of the environment.

Business users should contact their suppliers and check the terms and conditions of their purchase agreement. This product and its electronic accessories should not be mixed for disposal with commercial waste. Complies with the AEEE Directive.



### **Proper disposal of battery**


(Applies to countries that have separate waste collection systems.)

If you intend to dispose of the product, the necessary measures must be taken in the waste collection areas for the reprocessing and repairing of the product, including the battery.


The lifetime of this device is 3 years.



## **INFORMATION ON THE ENERGY-EFFICIENT OPERATION OF ENERGY-CONSUMING PRODUCTS**



For the lifetime energy-efficient operation of your product, any maintenance must be performed by authorized certified personnel. Your device must be operated in environments that meet the environmental specifications explained in this user manual.



### **HEALTH, SAFETY AND ENVIRONMENTAL CONSIDERATIONS**

Please keep your product away from heat sources such as radiators and ovens. Please dispose of your electronic product in recycle bins instead of domestic waste bins due to the negative effects of harmful components on human health and the environment.







*with ♥ from ttec*