



S20000

Universal Mobile Charger

User Manual

[www.hellottec.com](http://www.hellottec.com)

# Table of Contents

Thanks.....	4
Overview.....	5
Usage.....	6
Turning on and off.....	7
How to charge S20000.....	8
Charging your device with S20000.....	10
Checking S20000's remaining power capacity.....	11
Flashlight.....	11
Important safety instructions.....	12
Maintenance.....	15

## Thanks

Thanks for having bought S20000. Please read the explanations carefully before operating the product for the optimal performance and safety. Please keep your user manual for future reference.


### Specifications

- Capacity: 20000mAh
- Battery type: Li-Polymer
- Port: 1 Micro USB Port
- Port: 2 USB Ports
- Input: DC5V 2A (maximum)
- Output: DC5V 1A+2A (maximum)
- Charging time: 11-12 hours
- Dimensions: 150mm x 73mm x 28mm

## Overview

S20000 Power Bank features the parts shown in the following figure:

- 1- USB port I
- 2- Flashlight
- 3- USB port II
- 4- Power button
- 5- LED indicator

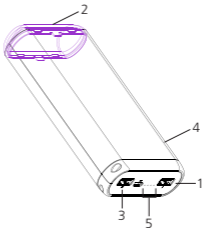

### Contents of the package:

- 1 S20000 Power Bank
- 1 Micro USB Cable
- 1 User Manual

## Usage



- iPhone/iPod/iPad
- Samsung, LG, Sony, HTC, Nokia, Huawei, Motorola, BlackBerry, etc.
- Smart watches
- Digital cameras
- Portable Bluetooth devices such as headphones, car kits, speakers
- Handheld game consoles

## Turning on and off

### Turning S20000 on and off

#### 1. Turning S20000 on:

Press the power button once to turn on the LED power indicator, which means that the device is on.

#### 2. Turning S20000 off:

If S20000 is not connected to any device, the LED indicator will turn off within 10 seconds and S20000 turns off.



*If no device is connected, the LED indicators will turn off after 10 seconds, and the power bank will automatically turn off after 120 seconds.*

## How to Charge S20000

### Charging S20000

Connect the micro USB end of the USB cable to the Micro USB port on S20000, and then connect the USB end of the cable to a charging device that accepts a USB cable or your computer to start charging.

- While charging, the LED lights will blink to indicate the charging status.
- Once the charging is complete, all of the 4 LED lights will illuminate.





## How to Charge S20000

 


*When S20000 is not responding or in short circuit protection mode due to improper use, charge and restart S20000.*

*\*Charging device and computer are not included in the package. Charging time depends on the output power of the charger.*

## Charging your device with S20000

Suitable for the following devices:



iPad



iPhone



Telephone



MP3/MP4



PSP

1. To connect your device, you can use your original USB data cable or the Micro USB cable that comes in the package.
2. Connect your device to the USB port of S20000 with a cable.
3. Press the power button.
4. The LED power indicator will turn off after 10 seconds while your device is charging.
5. Disconnect your device after it is fully charged.

## Checking S20000's remaining power capacity

Press the power button to check the remaining battery level indicated by the LED lights.

“●” On; “○” Off; Color: Blue.

	○○○○	●○○○	●●○○	●●●○	●●●●
	≤25%	26%--50%	51%--75%	76%--99%	100%

## Flashlight

To turn on/off the flashlight, click twice the power button.

## Important safety instructions

- In order to maximize the battery life, fully charge S20000 prior to first use.
- Keep S20000 in a dry and cool place.
- Do not leave S20000 in a hot and humid environment.
- The ambient temperature where it is used should be 10°C to 45°C.
- If S20000 has not been used for a long time, you need to charge it and drain its charge every 3 months.
- S20000 may generate heat when charging a device. It is normal and there is no need to become alarmed.
- Under normal conditions, the battery performance will decrease over a couple of years.
- Do not throw S20000 into extremely hot places and fire.
- Do not clean S20000 with harmful chemicals or cleaning agents.
- Misuse, dropping or extreme power may damage the device.

## Safety information

- Remove the product carefully from its box, and keep all the accessories within the box in order not to lose them. Check the product against any possible damages during transportation. Do not expose your product to any impact when carrying.
- If your product is damaged and not working, immediately notify the supplier.
- If your product was directly sent to you, promptly inform the sender company.
- Your product does not contain any maintainable parts; refer to the authorized service stations (See the list showing the authorized service stations) or the authorized dealer from whom you have bought your product.

## Information on misuse

- Errors arising from failure to use the product as indicated in the manual,
- Short-circuiting of the product when it is operated in hot and extremely humid environments,
- Using connection cables other than those that have been provided in the product's package by the manufacturing company,
- Interventions by the user or inserting or removing parts,
- Exterior damages to products such as physical impacts and breaks,
- Destroying or removing the serial number of the product,
- Malfunctions arising from not using the original consumable materials,
- Damages resulting from natural disasters such as fire, lightning, flood, earthquake.

## Maintenance

**Your device is a product of superior design and workmanship, and it should be maintained carefully. The following recommendations will help you preserve the warranty.**

- Keep all the accessories and additional parts out of reach of children.
- Make sure that the device stays dry. Rain, humidity and all kinds of liquids contain minerals that may corrode the electronic circuits. If your device gets wet, dry it out.
- Do not use and keep the device in dusty and dirty environments. Otherwise, the moving parts and electronic components may become damaged.
- Do not keep the device in hot areas. High temperatures may decrease the economic life of electronic devices, damage their batteries and cause deformation or melting of certain plastic parts.

- Do not store your device in cold areas. When the device returns to its normal temperature, humidity can form within the device, which may damage the electronic circuits.
- Do not drop or shake your device or expose it to impact. Rough use may result in breaking of the internal circuits and sensitive mechanical parts.
- Do not use harsh chemicals, cleaning solvents or strong cleaning agents to clean your device.
- Do not paint your device. Paints may restrict the movements of moving parts and prevent them from working properly.

All of the recommendations above apply to the device, batteries, charging device or all the other accessories. If any device is not working properly, take your device to the nearest authorized service.



The ECONOMIC LIFE needed for your device to fulfill its functions is 3 years in terms of spare parts supply.

Note: Our company is not responsible for any typographical errors.

\*\*\* This product has been marked in accordance with the



norms.

\*\*\* This product is RoHS compliant.



## RoHs Declaration

All the lead-free products offered by the company are in compliance with the Restriction of Hazardous Substances Directive (RoHS); this means that our production processes and products are strictly free of "lead" and any substances indicated in the Directive.



The crossed-out wheeled bin symbol symbolizes that the product must be collected separately at the end of its economic life within the European Union. This applies to your product that bears this symbol and its accessories. Do not dispose of these products as unclassified urban waste.



### **Correct disposal of this product**

(Waste electrical and electronic devices) (For countries that have separate collection systems)

This symbol found on the product, its accessories or relevant documents indicates that the product and its electronic accessories (e.g. charging device, earphones, USB cable) should not be disposed of along with other domestic wastes. In order to prevent the harmful effect of uncontrolled disposal of wastes on the environment and human health, please separate it from other types of waste and ensure the recycling of material sources for their sustainable reuse. Domestic users should contact their Dealer or the local authority for detailed information on where to take this product and how to do it for an environmentally safe recycling. Industrial users should contact their supplier and check the provisions and conditions of the purchasing agreement. This product and its electronic accessories should not be mixed with the wastes to be destroyed or commercial wastes.



### **Correct disposal of the battery**

(For countries that have separate collection systems)

If you intend to dispose of the product, necessary precautions should be taken for reprocessing and repair of the product, including its battery, at the waste collection area.

The economic life of this product is 3 years.

In the event it is understood that the product is defective, the consumer may exercise one of the following rights stipulated in Article 11 of the Consumer Protection Law no. 6502:

- a- Withdrawing from the agreement,
- b- Asking for discount on the sale price,
- c- Asking for a free repair, or
- d- Asking for replacement of the product with a product that is free of defects.



*with ♥ from ttec*